



**estec**

European Space Research  
and Technology Centre

Keplerlaan 1

2201 AZ Noordwijk

The Netherlands

T +31 (0)71 565 6565

F +31 (0)71 565 6040

www.esa.int

# DOCUMENT

## Earth Observation Mission Software File Format Specification

Prepared by	EOP-PE CFI Team
Reference	<del>PE-ID-ESA-GS-584</del> <del>PE-ID-ESA-GS-584</del>
Issue	1
Revision	89
Date of Issue	<del>0727-0606-2022</del>
Status	<del>Final-Final</del>
Document Type	Format Specification



# APPROVAL

<b>Title</b> <del>Earth Observation Mission Software File Format Specification</del> Earth Observation Mission Software File Format Specification	
<b>Issue</b> <del>1†</del>	<b>Revision</b> <del>8g</del>
<b>Author</b> <del>EOP-PE CFI Team</del> EOP-PE CFI Team	<b>Date</b> <del>07-06-2022</del> 27-06-2024
<b>Approved by</b> <del>Michele Zundo</del> Michele Zundo	<b>Date</b> <del>07-06-2022</del> 27-06-2024

# CHANGE LOG

Reason for change	Issue	Revision	Date
First Issue	1	0	16/02/2017
Updated Orbit Scenario File Format and Version; Clarification about File Format Version; Added Compliance to legacy File Format Standards; Minor changes in examples.	1	1	21/03/2017
Review corresponding to release of EO CFI 4.15	1	2	15/06/2018
Review corresponding to release of EO CFI 4.16	1	3	09/11/2018
Review corresponding to release of EO CFI 4.17	1	4	28/05/2019
Review corresponding to release of EO CFI 4.21	1	6	30/06/2021
Review corresponding to release of EO CFI 4.22	1	7	22/12/2021
Review corresponding to release of EO CFI 4.23	1	8	27/06/2022

# CHANGE RECORD

<b>Issue</b> 1	<b>Revision</b> 0		
Reason for change	Date	Pages	Paragraph(s)
First Issue	16/2/2017	All	All

<b>Issue</b> 1	<b>Revision</b> 1		
Reason for change	Date	Pages	Paragraph(s)
Updated Orbit Scenario File Format and Version; Clarification about File Format Version; Added Compliance to legacy File Format Standards Minor changes in examples.	21/3/2017		1, 3.2 1 2 3.11

<b>Issue</b> 1	<b>Revision</b> 2		
Reason for change	Date	Pages	Paragraph(s)
Updated Orbit State Vector File Schema Name; Updated Attitude Definition File Schema Version; Updated Orbit Scenario File Format and Version; Updated Swath Definition File Format and Version	19/6/2018		2 2 2, 3.2 2, 3.6



<b>Issue 1</b>		<b>Revision 3</b>	
Reason for change	Date	Pages	Paragraph(s)
Updated Attitude Definition File Schema Version;	9/11/2018		2, 3.10.2, 3.10.3

<b>Issue 1</b>		<b>Revision 4</b>	
Reason for change	Date	Pages	Paragraph(s)
Added DEM Raster Configuration file	28/05/2019		3.12

<b>Issue 1</b>		<b>Revision 5</b>	
Reason for change	Date	Pages	Paragraph(s)
Support Reference_Frame tag in Attitude Angles files	29/05/2020		1, 2, 3.4.3, 3.5

<b>Issue 1</b>		<b>Revision 6</b>	
Reason for change	Date	Pages	Paragraph(s)
Updated Swath Definition File and Attitude Definition File Data Block to allow the use of parameter names or the equivalent enumerate value	30/06/2021	27-31	3.6.2

<b>Issue 1</b>		<b>Revision 7</b>	
Reason for change	Date	Pages	Paragraph(s)
Correct the specification of the Offset element location for Sat_Instrument_att	22/12/2021	27, 29	Table 39, 43, 44
Correct the typo in elements of Harmonic_Model		28	Table 41
Add optional element Maximum_Height_Value		50	Table 83, Example
Update version of XML Schema used to validate the Generic Raster DEM configuration file		50	3.12.6

<b>Issue 1</b>		<b>Revision 8</b>	
Reason for change	Date	Pages	Paragraph(s)
Enable specifying SP3 identifier as part of Satellite Configuration	27/06/2022	6, 9, 17-19	Table 1, Table 2, 3.3

<b><u>Issue 1</u></b>		<b><u>Revision 9</u></b>	
<u>Reason for change</u>	<u>Date</u>	<u>Pages</u>	<u>Paragraph(s)</u>
<u>Enable specifying SP3 identifier as part of Satellite Configuration</u>	<u>07/06/2024</u>	<u>36</u>	<u>Section 3.8.2, table 62</u>



**Table of contents:**

<b>1</b>	<b>INTRODUCTION</b>	<b>7</b>
<b>2</b>	<b>COMPLIANCE WITH FILE FORMAT STANDARD</b>	<b>8</b>
<b>3</b>	<b>FILE FORMAT SPECIFICATION</b>	<b>11</b>
3.1	Orbit State Vector File	11
3.1.1	Variable Header	11
3.1.2	Data Block	11
3.1.3	Schema Reference	13
3.2	Orbit Scenario File	14
3.2.1	Variable Header	14
3.2.2	Data Block	14
3.2.3	Schema Reference	16
3.3	Satellite Configuration File	18
3.3.1	Variable Header	18
3.3.2	Data Block	18
3.3.3	Schema Reference	19
3.4	Attitude Quaternion File	21
3.4.1	Variable Header	21
3.4.2	Data Block	21
3.4.3	Schema Reference	22
3.5	Attitude Roll Pitch Yaw File	24
3.5.1	Variable Header	24
3.5.2	Data Block	24
3.5.3	Schema Reference	25
3.6	Swath Definition File	26
3.6.1	Variable Header	26
3.6.2	Data Block	26
3.6.3	Schema Reference	32
3.7	Swath Template File	33
3.7.1	Variable Header	33
3.7.2	Data Block	34
3.7.3	Schema Reference	36
3.8	Zone Database File	37
3.8.1	Variable Header	37
3.8.2	Data Block	37
3.8.3	Schema Reference	38
3.9	Station Database File	39
3.9.1	Variable Header	39
3.9.2	Data Block	39
3.9.3	Schema Reference	41
3.10	Attitude Definition File	42
3.10.1	Variable Header	42
3.10.2	Data Block	42
3.10.3	Schema Reference	45
3.11	Field of View Configuration File	47
3.11.1	Variable Header	47
3.11.2	Data Block	47
3.11.3	Schema Reference	48
3.12	DEM Generic Raster Configuration File	50
3.12.1	File naming convention	50
3.12.2	Binary Data Format	50
3.12.3	DEM Raster Configuration File	51



3.12.4 Variable Header.....	51
3.12.5 Data Block.....	51
3.12.6 Schema Reference.....	52
<b>1 INTRODUCTION.....</b>	<b>6</b>
<b>2 COMPLIANCE WITH FILE FORMAT STANDARD.....</b>	<b>7</b>
<b>3 FILE FORMAT SPECIFICATION.....</b>	<b>10</b>
3.1 Orbit State Vector File.....	10
3.1.1 Variable Header.....	10
3.1.2 Data Block.....	10
3.1.3 Schema Reference.....	12
3.2 Orbit Scenario File.....	13
3.2.1 Variable Header.....	13
3.2.2 Data Block.....	13
3.2.3 Schema Reference.....	15
3.3 Satellite Configuration File.....	17
3.3.1 Variable Header.....	17
3.3.2 Data Block.....	17
3.3.3 Schema Reference.....	18
3.4 Attitude Quaternion File.....	20
3.4.1 Variable Header.....	20
3.4.2 Data Block.....	20
3.4.3 Schema Reference.....	21
3.5 Attitude Roll Pitch Yaw File.....	23
3.5.1 Variable Header.....	23
3.5.2 Data Block.....	23
3.5.3 Schema Reference.....	24
3.6 Swath Definition File.....	25
3.6.1 Variable Header.....	25
3.6.2 Data Block.....	25
3.6.3 Schema Reference.....	31
3.7 Swath Template File.....	32
3.7.1 Variable Header.....	32
3.7.2 Data Block.....	33
3.7.3 Schema Reference.....	35
3.8 Zone Database File.....	36
3.8.1 Variable Header.....	36
3.8.2 Data Block.....	36
3.8.3 Schema Reference.....	37
3.9 Station Database File.....	38
3.9.1 Variable Header.....	38
3.9.2 Data Block.....	38
3.9.3 Schema Reference.....	40
3.10 Attitude Definition File.....	41
3.10.1 Variable Header.....	41
3.10.2 Data Block.....	41
3.10.3 Schema Reference.....	43
3.11 Field of View Configuration File.....	45
3.11.1 Variable Header.....	45
3.11.2 Data Block.....	45
3.11.3 Schema Reference.....	46
3.12 DEM Generic Raster Configuration File.....	48
3.12.1 File naming convention.....	48
3.12.2 Binary Data Format.....	48



3.12.3 DEM Raster Configuration File.....	49
3.12.4 Variable Header.....	49
3.12.5 Data Block.....	49
3.12.6 Schema Reference.....	50

## 1 INTRODUCTION

This document describes the format of some of the files used within Earth Observation Ground Segment Facilities. Formats are described for the file types listed in [Table 1](#)~~Table 4~~. These files are compliant with Earth Observation Ground Segment File Format Standard (FFS), see [RD01].

The “Format Version” is a number keeping track of format modifications. The formats defined by the Format Versions mentioned in [Table 1](#)~~Table 4~~ are compliant with FFS v3.0.

File Type	Content	Format Version
Orbit State Vector File	List of Orbit State Vectors (i.e. position and velocity at given times)	3.0
Orbit Scenario File	Set of parameters describing an orbit, e.g. repeat cycle, cycle length, MLST	3.1
Satellite Configuration File	Set of parameters describing an orbit, e.g. keplerian elements	3.1
Attitude Quaternion File	List of quaternions at given times	3.1
Attitude Roll Pitch Yaw File	List of roll pitch yaw angles at given times	3.1
Swath Definition File	Set of parameters defining an instrument swath	4.0
Swath Template File	One or more lists of latitude, longitude points defining a swath footprint	4.0
Zone Database File	One or more lists of latitude, longitude points defining zones (e.g. polygons)	3.0
Station Database File	One or more set of parameters defining Ground Stations	3.0
Attitude Definition File	Set of data or models defining satellite attitude	3.1
Field of View Configuration File	Set of parameters (e.g. list of azimuth, elevation) defining a field of view	3.0

**Table 1 – list of Earth Observation Ground Segment Files**

### References

Id	Title
[RD01]	Earth Observation Ground Segment File Format Standard (version 3.0), <a href="http://eop-cfi.esa.int/Repo/PUBLIC/DOCUMENTATION/SYSTEM_SUPPORT_DOCS/PE-TN-ESA-GS-0001%20EO%20GS%20File%20Format%20Standard%203.0.pdf">http://eop-cfi.esa.int/Repo/PUBLIC/DOCUMENTATION/SYSTEM_SUPPORT_DOCS/PE-TN-ESA-GS-0001%20EO%20GS%20File%20Format%20Standard%203.0.pdf</a>
[RD02]	Handbook for EO XML and Binary Schemas (version 1.7.1), <a href="http://eop-cfi.esa.int/Repo/PUBLIC/DOCUMENTATION/SYSTEM_SUPPORT_DOCS/PE-TN-ESA-GS-121%20%20Handbook%20for%20EO%20XML%20and%20Binary%20Schemas%201.7.1.pdf">http://eop-cfi.esa.int/Repo/PUBLIC/DOCUMENTATION/SYSTEM_SUPPORT_DOCS/PE-TN-ESA-GS-121%20%20Handbook%20for%20EO%20XML%20and%20Binary%20Schemas%201.7.1.pdf</a>
[RD03]	Earth Observation Ground Segment File Format Standard (version 2.0), <a href="http://eop-cfi.esa.int/Repo/PUBLIC/DOCUMENTATION/SYSTEM_SUPPORT_DOCS/PE-TN-ESA-GS-0001%20EO%20GS%20File%20Format%20Standard%202.0.pdf">http://eop-cfi.esa.int/Repo/PUBLIC/DOCUMENTATION/SYSTEM_SUPPORT_DOCS/PE-TN-ESA-GS-0001%20EO%20GS%20File%20Format%20Standard%202.0.pdf</a>

## 2 COMPLIANCE WITH FILE FORMAT STANDARD

The File Format Standard (FFS) defines a structure common to all files used within the Earth Observation Ground Segment. More details can be found in [RD01].

**Figure 1** shows the skeleton of a file compliant with FFS v3.0. The file shall be written according to XML syntax and shall follow certain conventions for file naming. It shall be composed by a Fixed Header (enclosed within **Fixed\_Header** tags), a Variable Header (enclosed within **Variable\_Header** tags), and a Data Block (enclosed within **Data\_Block** tags). Only Variable Header and Data Block content depends on the file type. The file shall reference to an XML schema for validation via dedicated attributes in the **Earth\_Observation\_File** element as described in section 7.3 of [RD02]. Such attributes are:

- `xsi:schemaLocation` : the validating schema URL
- `schemaVersion` : the validating schema version

The validating schema version is encoded in the schema filename (e.g. version 1.5 is encoded as 0105 in `EO_OPER_MPL_ORBRES_0105.XSD`).

The validating schema version is identical to the File Format Version (e.g. the validating schema for Orbit Scenario File Format version 3.1 is named `EO_OPER_MPL_ORBSCT_0301.XSD`).

```
<?xml version="1.0" encoding="UTF-8"?>
<Earth_Observation_File xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
xsi:schemaLocation="" schemaVersion="" xmlns="http://eop-cfi.esa.int/CFI">
  <Earth_Observation_Header>
    <Fixed_Header>
      <File_Name>...</File_Name>
      <File_Description>...</File_Description>
      <Notes> ... </Notes>
      <Mission>...</Mission>
      <File_Class>...</File_Class>
      <File_Type>...</File_Type>
      <Validity_Period>
        <Validity_Start>...</Validity_Start>
        <Validity_Stop>...</Validity_Stop>
      </Validity_Period>
      <File_Version>...</File_Version>
      <EOFFS_Version>...</EOFFS_Version>
      <Source>
        <System>...</System>
        <Creator>...</Creator>
        <Creator_Version>...</Creator_Version>
        <Creation_Date>...</Creation_Date>
      </Source>
    </Fixed_Header>
    <Variable_Header>
      ...
    </Variable_Header>
  </Earth_Observation_Header>
  <Data_Block type="xml">
    ...
  </Data_Block>
</Earth_Observation_File>
```

**Figure 1 – Skeleton of file compliant with FFS**



**Figure 2** shows the skeleton of a file compliant with FFS v2.0 (see [RD03]) and v1.0. The main difference between FFS v3.0 and previous versions v2.0 and v1.0 is the use of the **Earth\_Explorer\_File** and **Earth\_Explorer\_Header** elements. The **EOFFS\_Version** element is used only in FFS v3.0.

```
<?xml version="1.0" encoding="UTF-8"?>
<Earth_Explorer_File xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
xsi:schemaLocation="..." schemaVersion="..." xmlns="http://eop-cfi.esa.int/CFI">
  <Earth_Explorer_Header>
    <Fixed_Header>
      <File_Name>...</File_Name>
      <File_Description>...</File_Description>
      <Notes> ... </Notes>
      <Mission>...</Mission>
      <File_Class>...</File_Class>
      <File_Type>...</File_Type>
      <Validity_Period>
        <Validity_Start>...</Validity_Start>
        <Validity_Stop>...</Validity_Stop>
      </Validity_Period>
      <File_Version>...</File_Version>
      <Source>
        <System>...</System>
        <Creator>...</Creator>
        <Creator_Version>...</Creator_Version>
        <Creation_Date>...</Creation_Date>
      </Source>
    </Fixed_Header>
    <Variable_Header>
      ...
    </Variable_Header>
  </Earth_Explorer_Header>
  <Data_Block type="xml">
    ...
  </Data_Block>
</Earth_Explorer_File>
```

**Figure 2 – Skeleton of file compliant with FFS legacy versions**

The main difference between FFS v2.0 and FFS v1.0 is in file naming.

In FFS v3.0 and v2.0, the mission identifier is composed by three letters and the file extension is EOF (e.g. **S1A\_TEST\_AUX\_ORBRES\_20200401T040000\_20200401T041000\_0001.EOF**)

In FFS v1.0, the mission identifier is composed by two letters and the file extension is EEF (e.g. **CS\_TEST\_AUX\_ORBRES\_20200401T040000\_20200401T041000\_0001.EEF**)

**Table 2** provides, for each File Type and File Format Standard Version, the latest File Format Version and the relevant validating schema. Validating schemas can be found at: <http://eop-cfi.esa.int/CFI>

File Type	FFS Version	File Format Version	Validating schema
Orbit State Vector File	1.0	1.5	EO_OPER_AUX_ORBRES_0105.XSD
	2.0	2.3	EO_OPER_AUX_ORBRES_0203.XSD
	3.0	3.0	EO_OPER_AUX_ORBRES_0300.XSD
Orbit Scenario File	1.0	1.6	EO_OPER_MPL_ORBSCT_0106.XSD
	2.0	2.5	EO_OPER_MPL_ORBSCT_0205.XSD
	3.0	3.1	EO_OPER_MPL_ORBSCT_0301.XSD
Satellite Configuration File	1.0	1.4	EO_OPER_INT_SATCFG_0104.XSD
	2.0	2.3	EO_OPER_INT_SATCFG_0203.XSD
	3.0	3.1	EO_OPER_INT_SATCFG_0301.XSD
Attitude Quaternion File Attitude Roll Pitch Yaw File	1.0	1.4	EO_OPER_INT_ATTREF_0104.XSD
	2.0	2.4	EO_OPER_INT_ATTREF_0204.XSD
	3.0	3.1	EO_OPER_INT_ATTREF_0301.XSD
Swath Definition File	1.0	2.4	EO_OPER_MPL_SW_DEF_0204.XSD
	2.0	3.4	EO_OPER_MPL_SW_DEF_0304.XSD
	3.0	4.1	EO_OPER_MPL_SW_DEF_0401.XSD
Swath Template File	1.0	2.3	EO_OPER_MPL_SWTREF_0203.XSD
	2.0	3.3	EO_OPER_MPL_SWTREF_0303.XSD
	3.0	4.0	EO_OPER_MPL_SWTREF_0400.XSD
Zone Database File	1.0	1.3	EO_OPER_MPL_ZON_DB_0103.XSD
	2.0	2.2	EO_OPER_MPL_ZON_DB_0202.XSD
	3.0	3.0	EO_OPER_MPL_ZON_DB_0300.XSD
Station Database File	1.0	1.5	EO_OPER_MPL_GND_DB_0105.XSD
	2.0	2.2	EO_OPER_MPL_GND_DB_0202.XSD
	3.0	3.0	EO_OPER_MPL_GND_DB_0300.XSD
Attitude Definition File	1.0	1.4	EO_OPER_INT_ATTDEF_0104.XSD
	2.0	2.5	EO_OPER_INT_ATTDEF_0205.XSD
	3.0	3.2	EO_OPER_INT_ATTDEF_0302.XSD
Field of View Configuration File	1.0	1.0	EO_OPER_INT_FOVCFG_0100.XSD
	2.0	2.0	EO_OPER_INT_FOVCFG_0200.XSD
	3.0	3.0	EO_OPER_INT_FOVCFG_0300.XSD

**Table 2 – Mapping between File Types, FFS Version, File Format Version and validating schemas**

### 3 FILE FORMAT SPECIFICATION

The following sections describe, for each file type:

- the content of the Variable Header;
- the content of the Data Block;
- the reference to the validating schema for FFS v3.0 (shortly named “Schema Reference”).

#### 3.1 Orbit State Vector File

##### 3.1.1 Variable Header

The Variable Header content is a sequence of XML elements described in [Table 3Table 3](#).

XML Tag name	Type	Attributes	C Format	Description
Ref_Frame	string	-	%s	Orbit State Vector (see <a href="#">Table 5Table 5</a> ) co-ordinate system reference frame, it can be one of the following values: GEO_MEAN_2000 MEAN_DATE TRUE_DATE EARTH_FIXED
Time_Reference	string	-	%s	Time reference used when, due to an inconsistency with other time correlations, times associated to the state vector have to be recomputed. It can be one of the following values: TAI UTC UT1

**Table 3 – Variable Header content**

Example:

```
<Variable_Header>
  <Ref_Frame>EARTH_FIXED</Ref_Frame>
  <Time_Reference>UTC</Time_Reference>
</Variable_Header>
```

##### 3.1.2 Data Block

The Data Block content is a sequence of XML elements described in [Table 4Table 4](#).

XML Tag name	Type	Attributes	C Format	Description
List_of_OSVs	XML element	count="N" where n is the number of elements in the list	-	List of OSV elements (see <a href="#">Table 5Table 5</a> ).

**Table 4 – Data Block content**

XML Tag name	Type	Attributes	C Format	Description
TAI	string	-	-	TAI date and time of OSV, in ASCII standard time format, including time reference and microseconds: TAI=yyyy-mm-ddThh:mm:ss.ssssss
UTC	string	-	-	UTC date and time of OSV, in ASCII standard time format, including time reference and microseconds: UTC=yyyy-mm-ddThh:mm:ss.ssssss
UT1	string	-	-	UT1 date and time of OSV, in ASCII standard time format, including time reference and microseconds: UT1=yyyy-mm-ddThh:mm:ss.ssssss
Absolute_Orbit	integer	-	%+06ld	Absolute Orbit Number of the OSV
X	real	unit="m"	%+012.3lf	X component of the OSV position vector in m with a precision of 1e-3.
Y	real	unit="m"	%+012.3lf	Y component of the OSV position vector in m with a precision of 1e-3.
Z	real	unit="m"	%+012.3lf	Z component of the OSV position vector in m with a precision of 1e-3.
VX	real	unit="m/s"	%+012.6lf	X component of the OSV velocity vector in m/s with a precision of 1e-6.
VY	real	unit="m/s"	%+012.6lf	Y component of the OSV velocity vector in m/s with a precision of 1e-6.
VZ	real	unit="m/s"	%+012.6lf	Z component of the OSV velocity vector in m/s with a precision of 1e-6.
Quality	string	-	%13s	This parameter is added to keep format compatibility with legacy formats. Default ("not used") value is "000000000000"

Table 5 – OSV element content

Example (only the first and last OSVs are shown):

```

<Data_Block type="xml">
  <List_of_OSVs count="243">
    <OSV>
      <TAI>TAI=2021-06-10T04:57:17.817060</TAI>
      <UTC>UTC=2021-06-10T04:57:52.817060</UTC>
      <UT1>UT1=2021-06-10T04:57:53.117059</UT1>
      <Absolute_Orbit>+00999</Absolute_Orbit>
      <X unit="m">-1606749.988</X>
      <Y unit="m">-5677008.966</Y>
      <Z unit="m">-4135675.595</Z>
      <VX unit="m/s">-2876.652288</VX>
      <VY unit="m/s">-3541.028256</VY>
      <VZ unit="m/s">+5985.303441</VZ>
      <Quality>000000000000</Quality>
    </OSV>
    [...]
    <OSV>
      <TAI>TAI=2021-06-10T06:58:17.817060</TAI>
      <UTC>UTC=2021-06-10T06:58:52.817060</UTC>
      <UT1>UT1=2021-06-10T06:58:53.117059</UT1>
      <Absolute_Orbit>+01001</Absolute_Orbit>
      <X unit="m">-5075578.371</X>
      <Y unit="m">-3158584.535</Y>
      <Z unit="m">+4005164.344</Z>
      <VX unit="m/s">+2519.609604</VX>
      <VY unit="m/s">+3677.868542</VY>
      <VZ unit="m/s">+6075.683811</VZ>
      <Quality>000000000000</Quality>
  </List_of_OSVs>
</Data_Block>

```

```
</OSV>
</List_of_OSVs>
</Data_Block>
```

### 3.1.3 Schema Reference

An example of validating XML schema for this file type is located at:  
[http://eop-cfi.esa.int/CFI/EE\\_CFI\\_SCHEMAS/EO\\_OPER\\_AUX\\_ORBRES\\_0300.XSD](http://eop-cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_AUX_ORBRES_0300.XSD)

This schema is compliant to [RD02] and includes format and range checks to ensure compliance to this specification and to the File Format Standard [RD01]. The schema file is named according to section 6.1.1 in [RD02] and is applicable to files named `MMM_OPER_AUX_ORBRES_<instance_id>.EOF`.

The following is the content of the [Earth\\_Observation\\_File](#) required to reference the above schema.

```
<Earth_Observation_File xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
xsi:schemaLocation="http://eop-cfi.esa.int/CFI http://eop-
cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_AUX_ORBRES_0300.XSD"
schemaVersion="3.0" xmlns="http://eop-cfi.esa.int/CFI">
```

## 3.2 Orbit Scenario File

### 3.2.1 Variable Header

The Variable Header content is a sequence of XML elements described in [Table 6](#).

XML Tag name	Type	Attributes	C Format	Description
Time_Reference	string	-	%s	Time reference used when, due to an inconsistency with other time correlations, times associated to the state vector have to be recomputed. It can be one of the following values: UT1

**Table 6 – Variable Header content**

Example:

```
<Variable_Header>
  <Time_Reference>UTC</Time_Reference>
</Variable_Header>
```

### 3.2.2 Data Block

The Data Block content is a sequence of XML elements described in [Table 7](#).

XML Tag name	Type	Attributes	C Format	Description
List_of_Orbit_Changes	XML element	count="N" where n is the number of elements in the list	-	List of Orbit_Change elements (see <a href="#">Table 8</a> ).

**Table 7 – Data Block content**

XML Tag name	Type	Attributes	C Format	Description
Orbit	XML element	-	-	Orbit information (see <a href="#">Table 9</a> ).
Cycle	XML element	-	-	Cycle information (see <a href="#">Table 10</a> ).
Time_of_ANX	XML element	-	-	Ascending node time (see <a href="#">Table 12</a> ).

**Table 8 – Orbit\_Change element content**

XML Tag name	Type	Attributes	C Format	Description
Absolute_Orbit	integer	-	%ld	absolute orbit number
Relative_Orbit	integer	-	%ld	relative orbit number
Cycle_Number	integer	-	%ld	cycle number
Phase_Number	integer	-	%ld	phase number

**Table 9 – Orbit element content**

XML Tag name	Type	Attributes	C Format	Description
Repeat_Cycle	integer	-	%ld	Repeat Cycle
Cycle_Length	integer		%ld	Cycle Length
ANX_Longitude	real	unit="deg"	%.6lf	longitude of ascending node crossing (ANX) in degrees with a resolution of 1e-6 degrees
ANX_Longitude_Drift	XML element	-	-	drift of ANX Longitude, see <a href="#">Table 11</a> <del>Table 11</del>
MLST	time	-	%s	mean local solar time at ANX of relative orbit 1 expressed as hours, minutes, seconds and microseconds HH:MM:SS.sssss
MLST_Drift	real	unit="s/day"	%.6lf	drift of mean local solar time in s/day with a resolution of 1e-6
MLST_Nonlinear_Drift	XML element	-	-	Non linear MLST data, see <a href="#">Table 12</a> <del>Table 12</del>

Table 10 – Cycle element content

XML Tag name	Type	Attributes	C Format	Description
Offset	real	unit="deg"	%.6lf	ANX Longitude drift initial value in deg with a resolution of 1e-6
Linear_Term	real	unit="deg/day"	%.6lf	ANX Longitude drift linear term in deg/day with a resolution of 1-6

Table 11 – ANX\_Longitude\_Drift element content

XML Tag name	Type	Attributes	C Format	Description
Linear_Approx_Vali dity	integer	unit="orbit s"	%d	Number of orbits in which linear approximation is valid.
Quadratic_Term	real	unit="s/day^2"	%.6lf	MLST Quadratic term in s/day^2 with a resolution of 1e-6s/day^2.
Harmonics_Terms	XML element	num="N" where N is the number of harmonics (between 0 and 2)	-	List of Harmonics_Term elements (see <a href="#">Table 13</a> <del>Table 13</del> ). The Harmonics_Term element has a seq="i" attribute, where I denotes the identifier in the sequence starting from 1.

Table 12 – MLST\_Nonlinear\_Drift element content

XML Tag name	Type	Attributes	C Format	Description
Reference_Time	string	time_ref="UT1"	%s	UT1 Reference time of harmonic, in ASCII standard time format, including microseconds: yyyy-mm-ddThh:mm:ss.ssssss
Period	real	unit="days"	%.62lf	Period of the harmonic in days with a resolution of 1e-2 days.
Amplitude_Sin	real	unit="sec"	%.53lf	Amplitude of sine in seconds with a resolution of 1e-3 seconds
Amplitude_Cos	real	unit="sec"	%.53lf	Amplitude of cosine in seconds with a resolution of 1e-3 seconds

Table 13 – Harmonics\_Term element content

XML Tag name	Type	Attributes	C Format	Description
TAI	string	-	%s	TAI date and time of ANX, in ASCII standard time format, including time reference and microseconds: TAI=yyyy-mm-ddThh:mm:ss.ssssss
UTC	string	-	%s	UTC date and time of ANX, in ASCII standard time format, including time reference and microseconds: UTC=yyyy-mm-ddThh:mm:ss.ssssss

UT1	string	-	%s	UT1 date and time of ANX, in ASCII standard time format, including time reference and microseconds: UT1=yyyy-mm-ddThh:mm:ss.ssssss
TAI	string	-	%s	TAI date and time of ANX, in ASCII standard time format, including time reference and microseconds: TAI=yyyy-mm-ddThh:mm:ss.ssssss

Table 14 – Time\_of\_ANX element content

Example:

```

<Data_Block type="xml">
  <List_of_Orbit_Changes count="1">
    <Orbit_Change>
      <Orbit>
        <Absolute_Orbit>1</Absolute_Orbit>
        <Relative_Orbit>11417</Relative_Orbit>
        <Cycle_Number>1</Cycle_Number>
        <Phase_Number>1</Phase_Number>
      </Orbit>
      <Cycle>
        <Repeat_Cycle unit="day">838</Repeat_Cycle>
        <Cycle_Length unit="orbit">11945</Cycle_Length>
        <ANX_Longitude unit="deg">40.300000</ANX_Longitude>
        <ANX_Longitude_Drift>
          <Offset unit="deg">0.010000</Offset>
          <Linear_Term unit="deg/day">0.000001</Linear_Term>
        </ANX_Longitude_Drift>
        <MLST>21:59:55.572000</MLST>
        <MLST_Drift unit="s/day">-0.270000</MLST_Drift>
        <MLST_Nonlinear_Drift>
          <Linear_Approx_Validity
unit="orbit">99999</Linear_Approx_Validity>
          <Quadratic_Term unit="s/day^2">0.000000</Quadratic_Term>
          <Harmonics_Terms num="1">
            <Harmonic_Term seq="1">
              <Reference_Time time_ref="UT1">2016-02-
17T00:00:00.000000</Reference_Time>
              <Period unit="days">10.00</Period>
              <Amplitude_Sin unit="sec">0.001</Amplitude_Sin>
              <Amplitude_Cos unit="sec">0.001</Amplitude_Cos>
            </Harmonics_Terms>
          </MLST_Nonlinear_Drift>
        </Cycle>
      <Time_of_ANX>
        <TAI>TAI=2016-02-16T19:19:20.844398</TAI>
        <UTC>UTC=2016-02-16T19:18:44.844398</UTC>
        <UT1>UT1=2016-02-16T19:18:44.844398</UT1>
      </Time_of_ANX>
    </Orbit_Change>
  </List_of_Orbit_Changes>
</Data_Block>

```

### 3.2.3 Schema Reference

An example of validating XML schema for this file type is located at:

[http://eop-cfi.esa.int/CFI/EE\\_CFI\\_SCHEMAS/EO\\_OPER\\_MPL\\_ORBSCT\\_0301.XSD](http://eop-cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_MPL_ORBSCT_0301.XSD)

This schema is compliant to [RD02] and includes format and range checks to ensure compliance to this specification and to the File Format Standard [RD01]. The schema file is named according to section 6.1.1 in [RD02] and is applicable to files named `MMM_OPER_MPL_ORBSCT_<instance_id>.EOF`.



The following is the content of the [Earth\\_Observation\\_File](#) required to reference the above schema.

```
<Earth_Observation_File xmlns:xsi=http://www.w3.org/2001/XMLSchema-instance
xsi:schemaLocation="http://eop-cfi.esa.int/CFI
http://eop-cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_MPL_ORBSCT_0301.XSD"
schemaVersion="3.1"
xmlns="http://eop-cfi.esa.int/CFI">
```

## 3.3 Satellite Configuration File

### 3.3.1 Variable Header

The Variable Header is empty for this type of file.

### 3.3.2 Data Block

The Data Block content is a sequence of XML elements described in [Table 15](#)~~Table 15~~.

XML Tag name	Type	Attributes	C Format	Description
Satellite_Name	string	-	%s	Satellite Name
SP3_Identifier (optional)	string	-	%s	Identifier of satellite in Extended Standard Product 3 Orbit Format (SP3-c) files
NORAD_Data	XML element	-	-	NORAD Satellite data, see <a href="#">Table 16</a> <del>Table 16</del>
Lib_Init	XML element	-	-	Low and tight tolerances for orbital parameters, see <a href="#">Table 17</a> <del>Table 17</del> .
Orbit_Init	XML element	-	-	Default Orbital parameters, see <a href="#">Table 18</a> <del>Table 18</del>

**Table 15 – Data Block content**

XML Tag name	Type	Attribute s	C Format	Description
Satellite_Number	integer	-	%ld	NORAD Satellite number
NORAD_Sat_Name	string	-	%s	NORAD Satellite name
Int_Designator	string	-	%s	NORAD international designator

**Table 16 – NORAD\_Data element content**

XML Tag name	Type	Attributes	C Format	Description
Low_Tolerances	string	-	%s	Low tolerances for orbital parameters, see <a href="#">Table 19</a> <del>Table 19</del>
Tight_Tolerances	XML element	-	-	Tight tolerances for orbital parameters, see <a href="#">Table 19</a> <del>Table 19</del>

**Table 17 – Lib\_Init element content**

XML Tag name	Type	Attribute s	C Format	Description
Min_Semi_Major_Axis	real	-	%lf	Minimum semi-major axis (meters)
Nom_Semi_Major_Axis	real	-	%lf	Nominal semi-major axis (meters)
Max_Semi_Major_Axis	real	-	%lf	Maximum semi-major axis (meters)
Min_Inclination	real	-	%lf	Minimum inclination (degrees)
Nom_Inclination	real	-	%lf	Nominal inclination (degrees)
Max_Inclination	real	-	%lf	Maximum inclination (degrees)
Nom_Eccentricity	real	-	%lf	Nominal Eccentricity
Nom_Arg_Perigee	real	-	%lf	Nominal Argument of perigee (degrees)

**Table 18 – Orbit\_Init element content**



XML Tag name	Type	Attributes	C Format	Description
Min_Semi_Major_Axis	real	-	%lf	Minimum semi-major axis (meters)
Max_Semi_Major_Axis	real	-	%lf	Maximum semi-major axis (meters)
Min_Inclination	real	-	%lf	Minimum inclination (degrees)
Max_Inclination	real	-	%lf	Maximum inclination (degrees)
Min_Eccentricity	real	-	%lf	Minimum Eccentricity
Max_Eccentricity	real	-	%lf	Maximum Eccentricity
Min_Semi_Major_Axis	real	-	%lf	Minimum semi-major axis (meters)
Max_Semi_Major_Axis	real	-	%lf	Maximum semi-major axis (meters)

Table 19 – Low\_ and Tight\_Tolerances element content

Example:

```

<Data_Block type="xml">
  <Satellite_Name>NEW SATELLITE</Satellite_Name>
  <SP3_Identifier>L40</SP3_Identifier> <!-- optional -->
  <NORAD_Data>
    <Satellite_Number>1</Satellite_Number>
    <NORAD_Sat_Name>TBD</NORAD_Sat_Name>
    <Int_Designator>00000AAA</Int_Designator>
  </NORAD_Data>
  <Lib_Init>
    <Low_Tolerances>
      <Min_Semi_Major_Axis>7140000.000000</Min_Semi_Major_Axis>
      <Max_Semi_Major_Axis>7240000.000000</Max_Semi_Major_Axis>
      <Min_Inclination>98.290000</Min_Inclination>
      <Max_Inclination>99.110000</Max_Inclination>
      <Min_Eccentricity>0.0</Min_Eccentricity>
      <Max_Eccentricity>0.5</Max_Eccentricity>
    </Low_Tolerances>
    <Tight_Tolerances>
      <Min_Semi_Major_Axis>7150000.000000</Min_Semi_Major_Axis>
      <Max_Semi_Major_Axis>7230000.000000</Max_Semi_Major_Axis>
      <Min_Inclination>98.390000</Min_Inclination>
      <Max_Inclination>99.010000</Max_Inclination>
      <Min_Eccentricity>0.0</Min_Eccentricity>
      <Max_Eccentricity>0.007</Max_Eccentricity>
    </Tight_Tolerances>
  </Lib_Init>
  <Orbit_Init>
    <Min_Semi_Major_Axis>7186000.000000</Min_Semi_Major_Axis>
    <Nom_Semi_Major_Axis>7195605.347274</Nom_Semi_Major_Axis>
    <Max_Semi_Major_Axis>7209000.000000</Max_Semi_Major_Axis>
    <Min_Inclination>98.690000</Min_Inclination>
    <Nom_Inclination>98.702197</Nom_Inclination>
    <Max_Inclination>98.710000</Max_Inclination>
    <Nom_Eccentricity>0.001141</Nom_Eccentricity>
    <Nom_Arg_Perigee>90.0</Nom_Arg_Perigee>
  </Orbit_Init>
</Data_Block>

```

### 3.3.3 Schema Reference

An example of validating XML schema for this file type is located at:  
[http://eop-cfi.esa.int/CFI/EE\\_CFI\\_SCHEMAS/EO\\_OPER\\_INT\\_SATCFG\\_0301.XSD](http://eop-cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_INT_SATCFG_0301.XSD)

This schema is compliant to [RD02] and includes format and range checks to ensure compliance to this

specification and to the File Format Standard [RD01]. The schema file is named according to section 6.1.1 in [RD02] and is applicable to files named `MMM_OPER_INT_SATCFG_<instance_id>.EOF`.

The following is the content of the [Earth\\_Observation\\_File](#) required to reference the above schema.

```
<Earth_Observation_File xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
xsi:schemaLocation="http://eop-cfi.esa.int/CFI http://eop-
cfi.esa.int/CFI/EE_CFI_SCHEMAS/ EO_OPER_INT_SATCFG_0301.XSD"
schemaVersion="3.1" xmlns="http://eop-cfi.esa.int/CFI">
```

## 3.4 Attitude Quaternion File

### 3.4.1 Variable Header

The Variable Header is empty for this type of file.

### 3.4.2 Data Block

The Attitude quaternion file contains a list of quaternion sets and associated times. Each quaternion set represent the transformation between a given Reference Frame to a given Satellite Based frame.

The Data Block content is a sequence of XML elements described in [Table 20](#)~~Table 20~~.

XML Tag name	Type	Attributes	C Format	Description
Attitude_File_Type	string	-	%s	It defines the Satellite Based Frame. It can be one of the following values: Sat_Nominal_Attitude Sat_Attitude Instr_Attitude
Attitude_Data_Type	string	-	%s	It defines the type of attitude data. It can be only the following value: Quaternions
Max_Gap	real	unit="s"	%.6f	Maximum gap between two consecutive set of quaternions
Quaternions_Data	XML element	-	-	See <a href="#">Table 21</a> <del>Table 21</del> .

Table 20 – Data Block content

XML Tag name	Type	Attributes	C Format	Description
Reference_Frame	string	-	%s	Reference frame. It could be one of the following: BM2000 HM2000 GM2000 MEAN_DATE TRUE_DATE QUASI_MEAN_DATE PSEUDO_TRUE_DATE EARTH_FIXED
List_of_Quaternions	XML element	count="N" where n is the number of elements in the list	-	List of Quaternions elements (see <a href="#">Table 22</a> <del>Table 22</del> ).

Table 21 – Quaternions\_Data element content

XML Tag name	Type	Attributes	C Format	Description
Time	string	ref="RRR" where RRR is one of the following: TAI UTC UT1 GPS	%s	Date for the quaternions. The date format is CCSDS-A with reference and microseconds (RRR=yyyy-mm-ddThh:nn:ss.sssss)
Q1	real	-	%.9lf	First coordinate of quaternion vector. Adimensional number with precision of 1e-9
Q2	real	-	%.9lf	Second coordinate of quaternion vector. Adimensional number with precision of 1e-9
Q3	real	-	%.9lf	Third coordinate of quaternion vector. Adimensional number with precision of 1e-9
Q4	real	-	%.9lf	Scalar part of quaternion. Adimensional number with precision of 1e-9

**Table 22 – Quaternions element content**

Example (only first and last item are shown):

```
<Data_Block type="xml">
  <Attitude_File_Type>Sat_Attitude</Attitude_File_Type>
  <Attitude_Data_Type>Quaternions</Attitude_Data_Type>
  <Max_Gap unit="s">11.000000</Max_Gap>
  <Quaternion_Data>
    <Reference_Frame>GM2000</Reference_Frame>
    <List_of_Quaternions count="1442">
      <Quaternions>
        <Time ref="UTC">UTC=2020-04-01T04:00:00.000000</Time>
        <Q1>0.487124882</Q1>
        <Q2>0.165975309</Q2>
        <Q3>0.579456084</Q3>
        <Q4>0.631974836</Q4>
      </Quaternions>
      [...]
      <Quaternions>
        <Time ref="UTC">UTC=2020-04-01T08:00:10.000000</Time>
        <Q1>0.690492661</Q1>
        <Q2>0.408245532</Q2>
        <Q3>0.468027160</Q3>
        <Q4>0.370818080</Q4>
      </Quaternions>
    </List_of_Quaternions>
  </Quaternion_Data>
</Data_Block>
```

### 3.4.3 Schema Reference

An example of validating XML schema for this file type is located at:  
[http://eop-cfi.esa.int/CFI/EE\\_CFI\\_SCHEMAS/EO\\_OPER\\_INT\\_ATTREF\\_0300.XSD](http://eop-cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_INT_ATTREF_0300.XSD)

This schema is compliant to [RD02] and includes format and range checks to ensure compliance to this specification and to the File Format Standard [RD01]. The schema file is named according to section 6.1.1 in [RD02] and is applicable to files named `MMM_OPER_INT_ATTREF_<instance_id>.EOF`.

The following is the content of the [Earth\\_Observation\\_File](#) required to reference the above schema.

```
<Earth_Observation_File xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
xsi:schemaLocation="http://eop-cfi.esa.int/CFI http://eop-
cfi.esa.int/CFI/EE_CFI_SCHEMAS/ EO_OPER_INT_ATTREF_0301.XSD"
schemaVersion="3.1" xmlns="http://eop-cfi.esa.int/CFI">
```

## 3.5 Attitude Roll Pitch Yaw File

### 3.5.1 Variable Header

The Variable Header is empty for this type of file.

### 3.5.2 Data Block

The Attitude Roll Pitch Yaw file contains a list of Roll Pitch Yaw sets and associated times. Each set represent the transformation between one reference Satellite Based Frame to another one.

The Data Block content is a sequence of XML elements described in [Table 23](#)~~Table-23~~.

XML Tag name	Type	Attributes	C Format	Description
Attitude_File_Type	string	-	%s	It defines the reference Satellite Based Frame. It can be one of the following values: Sat_Nominal_Attitude Sat_Attitude Instr_Attitude
Attitude_Data_Type	string	-	%s	It defines the type of attitude data. It can be only the following value: Attitude_Angles
Max_Gap	real	unit="s"	%.6f	Maximum gap between two consecutive set of quaternions
Attitude_Angles_Data	XML element	-	-	See <a href="#">Table 24</a> <del>Table-24</del> .

Table 23 – Data Block content

XML Tag name	Type	Attributes	C Format	Description
Reference_Frame	string	-	%s	Reference frame. It could be one of the following: BM2000 HM2000 GM2000 MEAN_DATE TRUE_DATE QUASI_MEAN_DATE PSEUDO_TRUE_DATE EARTH_FIXED SATELLITE_ACTUAL SATELLITE SATELLITE_RELATIVE
List_of_Attitude_Angles	XML element	count="N" where n is the number of elements in the list	-	List of Attitude_Angles elements (see <a href="#">Table 25</a> <del>Table-25</del> ).

Table 24 – Attitude\_Angles\_Data element content



XML Tag name	Type	Attributes	C Format	Description
Time	string	ref="RRR" where RRR is one of the following: TAI UTC UT1 GPS	%s	Date for the quaternions. The date format is CCSDS-A with reference and microseconds (RRR=yyyy-mm-ddThh:nn:ss.sssss)
Pitch	real	unit="deg"	%.6lf	Pitch angle in degrees with a precision of 1e-6.
Roll	real	unit="deg"	%.6lf	Roll angle in degrees with a precision of 1e-6.
Yaw	real	unit="deg"	%.6lf	Yaw angle in degrees with a precision of 1e-6.

**Table 25 – Attitude\_Angles element content**

Example (only first and last items are shown):

```
<Data_Block type="xml">
  <Attitude_File_Type>Sat_Attitude</Attitude_File_Type>
  <Attitude_Data_Type>Attitude_Angles</Attitude_Data_Type>
  <Max_Gap unit="s">11.000000</Max_Gap>
  <Attitude_Angles_Data>
    <Reference_Frame>GM2000</Reference_Frame>
    <List_of_Attitude_Angles count="1442">
      <Attitude_Angles>
        <Time ref="UTC">UTC=2020-04-01T04:00:00.000000</Time>
        <Pitch unit="deg">0.000001</Pitch>
        <Roll unit="deg">0.000002</Roll>
        <Yaw unit="deg">0.000003</Yaw>
      </Attitude_Angles>
    [... ]
      <Attitude_Angles>
        <Time ref="UTC">UTC=2020-04-01T08:00:10.000000</Time>
        <Pitch unit="deg">0.000004</Pitch>
        <Roll unit="deg">0.000005</Roll>
        <Yaw unit="deg">0.000006</Yaw>
      </Attitude_Angles>
    </List_of_Attitude_Angles>
  </Attitude_Angles_Data>
</Data_Block>
```

### 3.5.3 Schema Reference

An example of validating XML schema for this file type is located at:  
[http://eop-cfi.esa.int/CFI/EE\\_CFI\\_SCHEMAS/EO\\_OPER\\_INT\\_ATTREF\\_0301.XSD](http://eop-cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_INT_ATTREF_0301.XSD)

This schema is compliant to [RD02] and includes format and range checks to ensure compliance to this specification and to the File Format Standard [RD01]. The schema file is named according to section 6.1.1 in [RD02] and is applicable to files named `MMM_OPER_INT_ATTREF_<instance_id>.EOF`.

The following is the content of the [Earth\\_Observation\\_File](#) required to reference the above schema.

```
<Earth_Observation_File xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
  xsi:schemaLocation="http://eop-cfi.esa.int/CFI http://eop-cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_INT_ATTREF_0301.XSD"
  schemaVersion="3.1" xmlns="http://eop-cfi.esa.int/CFI">
```

## 3.6 Swath Definition File

### 3.6.1 Variable Header

The Variable Header is empty for this type of file.

### 3.6.2 Data Block

The Data Block content is a sequence of XML elements described in [Table 26](#) ~~Table 26~~.

XML Tag name	Type	Attributes	C Format	Description
Swath	XML element	-	-	Swath data structure see <a href="#">Table 27</a> <del>Table 27</del> .

**Table 26 – Data Block content**

XML Tag name	Type	Attributes	C Format	Description
Output_File_Description	string	-	%s	File Description for the output swath template file
Output_File_Type	string	-	%s	File type for the output swath template file. It should have the fixed value “MPL_SWTREF”
Swath_Type	string	-	%s	Swath type. It can have one of the following values: <ul style="list-style-type: none"> <li>• point</li> <li>• line</li> <li>• inertial</li> </ul>
Num_Swath_Records	integer	-	%d	Number of points in the swath template file (>0)
Refraction	XML element	-	-	Refraction model structure, see <a href="#">Table 28</a> <del>Table 28</del>
Either List_of_Swath_Points  or  Asar_Geometry	XML element	List_of_Swath_Points count=”n” number of points in the instantaneous swath  Asar_Geometry No attributes	-	List_of_Swath_Points: List of Swath_Point elements. Each element contains the geometry data for the calculation of each point in the instantaneous swath. See <a href="#">Table 29</a> <del>Table 29</del>  Asar_Geometry: ASAR geometry, see <a href="#">Table 29</a> <del>Table 29</del>
Sat_Nominal_Att	XML element	-	-	Satellite Nominal Attitude initialization data, see <a href="#">Table 38</a> <del>Table 38</del> .
Sat_Att	XML element	-	-	Satellite Attitude initialization data, see <a href="#">Table 39</a> <del>Table 39</del> .
Instr_Att	XML element	-	-	Instrument Attitude initialization data, see <a href="#">Table 39</a> <del>Table 39</del> .

**Table 27 – Swath element content**

XML Tag name	Type	Attributes	C Format	Description
Model	string	-	%s	Atmospheric refraction model. It can be one of: <ul style="list-style-type: none"> <li>• NO_REF</li> <li>• STD_REF</li> <li>• USER_REF</li> <li>• PRED_REF</li> </ul>
Freq	real	unit=”MHz”	%lf	Signal Frequency in MHz ( $\geq 0$ )

**Table 28 – Refraction element content**

XML Tag name	Type	Attributes	C Format	Description
One of the following Pointing_Geometry Distance_Geometry Limb_Geometry Inertial_Geometry Sub_Satellite_Geometry Asar_Geometry Incidence_Angle_Geometry	XML element	-	%s	This element contains the geometry data for the calculation of each point in the instantaneous swath.  Pointing_Geometry: see <a href="#">Table 30</a> <del>Table 30</del> Distance_Geometry: see <a href="#">Table 32</a> <del>Table 32</del> Limb_Geometry: see <a href="#">Table 31</a> <del>Table 31</del> Inertial_Geometry: see <a href="#">Table 31</a> <del>Table 31</del> Sub_Satellite_Geometry: see <a href="#">Table 36</a> <del>Table 36</del> Asar_Geometry: see <a href="#">Table 33</a> <del>Table 33</del> Incidence_Angle_Geometry: see <a href="#">Table 37</a> <del>Table 37</del>

Table 29 – Swath\_Point element content

XML Tag name	Type	Attributes	C Format	Description
Azimuth	real	unit="deg"	%lf	Swath azimuth in deg [0,360)
Elevation	real	unit="deg"	%lf	Swath elevation in deg [-90,90]
Altitude	real	unit="m"	%lf	Swath altitude in m (>= 0)

Table 30 – Pointing\_Geometry element content

XML Tag name	Type	Attributes	C Format	Description
Azimuth	real	unit="deg"	%lf	Swath azimuth in deg [0,360)
Altitude	real	unit="m"	%lf	Swath altitude in m (>= 0)

Table 31 – Limb\_ and Inertial\_Geometry element content

XML Tag name	Type	Attributes	C Format	Description
Azimuth	real	unit="deg"	%lf	Swath azimuth in deg [0,360)
Elevation	real	unit="deg"	%lf	Swath elevation in deg [-90,90]
Altitude	real	unit="m"	%lf	Swath altitude in m (>= 0)
Distance	real	unit="m"	%lf	distance in m (>= 0)

Table 32 – Distance\_Geometry element content

XML Tag name	Type	Attributes	C Format	Description
Left_Pt	XML element	-	-	This element contains the geometry data for the calculation of the left point in the instantaneous swath. It has the same content of Pointing_Geometry: see <a href="#">Table 30</a> <del>Table 30</del>
Mid_Pt	XML element	-	-	This element contains the geometry data for the calculation of the mid point in the instantaneous swath. It has the same content of Pointing_Geometry: see <a href="#">Table 30</a> <del>Table 30</del>
Right_Pt	XML element	-	-	This element contains the geometry data for the calculation of the right point in the instantaneous swath. It has the same content of Pointing_Geometry: see <a href="#">Table 30</a> <del>Table 30</del>
Either Narrow_Asar Or Wide_Asar	XML element	-	-	Slant range extension parameters. Narrow_Asar: see <a href="#">Table 34</a> <del>Table 34</del> Wide_Asar: see <a href="#">Table 35</a> <del>Table 35</del>

Table 33 – Asar\_Geometry element content

XML Tag name	Type	Attributes	C Format	Description
Slant_Range_Left	real	unit="10e-6s"	%lf	Slant Range Extension parameter for left point in microseconds.

**Table 34 – Narrow\_Asar element content**

XML Tag name	Type	Attributes	C Format	Description
Slant_Range_Left	real	unit="10e-6s"	%lf	Slant Range Extension parameter for left point in microseconds.
Slant_Range_Right	real	unit="10e-6s"	%lf	Slant Range Extension parameter for right point in microseconds.

**Table 35 – Wide\_Asar element content**

XML Tag name	Type	Attributes	C Format	Description
Azimuth	real	unit="deg"	%lf	Swath azimuth in deg [0,360)

**Table 36 – Sub\_Satellite\_Geometry element content**

XML Tag name	Type	Attributes	C Format	Description
Azimuth	real	unit="deg"	%lf	Swath azimuth in deg [0,360)
Incidence_Angle	real	unit="deg"	%lf	Swath incidence angle in deg [0,90)
Altitude	real	unit="m"	%lf	Swath altitude in m (>= 0)

**Table 37 – Incidence\_Angle\_Geometry element content**

XML Tag name	Type	Attributes	C Format	Description
One of the following None AOCS_Model Parameter_Model Harmonic_Model File_Model	AOCS_Model string  Parameter_Model Harmonic_Model File_Model XML element  None XML element (empty)	-	AOCS_Model %s	Satellite Nominal Attitude initialization data  AOCS_Model AOCS model: contains the name of the AOCS model (or the corresponding enumerate value, as shown in parenthesis): GEOCENTRIC_POINTING (0) LOCAL_NORMAL_POINTING (1) YAW_STEERING_MODE (2) ZERO_DOPPLER_YSM (3)  Parameter_Model: see <a href="#">Table 40</a> Harmonic_Model: see <a href="#">Table 41</a> File_Model: see <a href="#">Table 42</a>

**Table 38 – Sat\_Nominal\_Att element content**

XML Tag name	Type	Attributes	C Format	Description
One of the following None Angle_Model Matrix_Model Harmonic_Model File_Model	XML element  None XML element (empty)	-	-	Satellite Attitude initialization data  Angle_Model: see <a href="#">Table 43</a> Matrix_Model: see <a href="#">Table 44</a> Harmonic_Model: see <a href="#">Table 41</a> File_Model: see <a href="#">Table 42</a>
Offsets (only in Instr_Att and after the following elements:	XML element	-	-	See <a href="#">Table 47</a> .

Angle_Model, Matrix_Model or Harmonic_Model)				
--	--	--	--	--

Table 39 – Sat\_ and Instrument\_Att element content

XML Tag name	Type	Attributes	C Format	Description
Model	string	-	%s	Attitude Model Identifier This element contains the name of the model (or the corresponding enumerate value, as shown in parenthesis): GENERIC (0) ENVISAT (1) CRYOSAT (2) ADM (3) SENTINEL1 (4) SENTINEL2 (5) GEO (6) METOPSG (7)
List_of_Parameters	XML element	count="n" where n is the number of elements in the list	-	List of Parameter elements. See <a href="#">Table 45</a> .

Table 40 – Parameter\_Model element content

XML Tag name	Type	Attributes	C Format	Description
Angle_Type	integer	-	%ld	Angle Type. This element contains the name of the angle type (or the corresponding enumerate value, as shown in parenthesis): TRUE_LAT_TOD (0) TRUE_LAT_EF (1)
List_of_Harmonics_Pitch	XML element	count="n" where n is the number of elements in the list	-	List of Harmonic elements for Pitch, see <a href="#">Table 46</a> .
List_of_Harmonics_Roll	XML element	count="n" where n is the number of elements in the list	-	List of Harmonic elements for Roll see <a href="#">Table 46</a> .
List_of_Harmonics_Yaw	XML element	count="n" where n is the number of elements in the list	-	List of Harmonic elements for Yaw see <a href="#">Table 46</a> .
Offsets (present only in Instr_Att)	XML element	-	-	See <a href="#">Table 47</a> .

Table 41 – Harmonic\_Model element content

XML Tag name	Type	Attributes	C Format	Description
List_of_Files	XML element	count="n" where n is the number of elements in the list	%ld	List of File elements, see <a href="#">Table 48</a> .
Auxiliary_File (present only in Sat_Att)	string	-	%s	Attitude auxiliary file name
Time_Selection	XML element	-	-	This element indicates the time window to be read from the attitude files. See <a href="#">Table 49</a> .

--	--	--	--	--

**Table 42 – File\_Model element content**

XML Tag name	Type	Attributes	C Format	Description
Angle_1	real	unit="deg"	%lf	Pitch Mispointing Angle
Angle_2	real	unit="deg"	%lf	Roll Mispointing Angle
Angle_3	real	unit="deg"	%lf	Yaw Mispointing Angle

**Table 43 – Angle\_Model element content**

XML Tag name	Type	Attributes	C Format	Description
Row_1	Row_Type	-	3 elements Column_* [See Table 51]	Mispointing matrix first row
Row_2	Row_Type	-	3 elements Column_* [See Table 51]	Mispointing matrix second row
Row_3	Row_Type	-	3 elements Column_* [See Table 51]	Mispointing matrix third row

**Table 44 – Matrix\_Model element content**

XML Tag name	Type	Attributes	C Format	Description
Parameter	string	-	%s	Parameter. When the Parameter Model element is set to GENERIC, the following axes and target names (or the enumerate values, as shown in parenthesis) are valid: <ul style="list-style-type: none"> <li>• For the axes names (Parameter[0] and [5]):                             <ul style="list-style-type: none"> <li>○ X_AXIS (0)</li> <li>○ NEG_X_AXIS (1)</li> <li>○ Y_AXIS (2)</li> <li>○ NEG_Y_AXIS (3)</li> <li>○ Z_AXIS (4)</li> <li>○ NEG_Z_AXIS (5)</li> </ul> </li> <li>• For the target names (Parameter[1] and [6]):                             <ul style="list-style-type: none"> <li>○ SUN_VEC (0)</li> <li>○ MOON_VEC (1)</li> <li>○ EARTH_VEC (2)</li> <li>○ NADIR_VEC (3)</li> <li>○ INERTIAL_VEL_VEC (4)</li> <li>○ EF_VEL_VEC (5)</li> <li>○ INERTIAL_TARGET_VEC (6)</li> <li>○ EF_TARGET_VEC (7)</li> <li>○ SC_EF_VEL_VEC (8)</li> <li>○ ORBIT_POLE (9)</li> <li>○ INERTIAL_POS_VEC_CORRECTED (10)</li> <li>○ INERTIAL_VEL_VEC_ROTATED (11)</li> <li>○ EF_NORTH (12)</li> <li>○ EF_SOUTH (13)</li> </ul> </li> </ul>

**Table 45 – Parameter element content**

XML Tag name	Type	Attributes	C Format	Description
Harmonic_Type	integer	-	%ld	Harmonic Type
Harmonic_Coefficient	real	-	%lf	Harmonic Coefficient

**Table 46 – Harmonic element content**



XML Tag name	Type	Attributes	C Format	Description
Offset_X	real	unit="m"	%lf	X offset
Offset_Y	real	unit="m"	%lf	Y offset
Offset_Z	real	unit="m"	%lf	Z offset

**Table 47 – Offsets element content**

XML Tag name	Type	Attributes	C Format	Description
File	string	-	%s	Attitude filename (full path)

**Table 48 – File element content**

XML Tag name	Type	Attributes	C Format	Description
Either Select_File Or Time_Window	XML element	Time_Window time_ref="REF" being REF one of the following: UTC UT1 TAI GPS	-	Select_File: the whole files to be read (the tag has an empty value)  Time_Window: indicates which part of the files has to be read. See <a href="#">Table 50</a> <a href="#">Table 50</a> .

**Table 49 – Time\_Selection element content**

XML Tag name	Type	Attributes	C Format	Description
Time_0	real	-	%lf	Start time in MJD2000
Time_1	real	-	%lf	Stop time in MJD2000

**Table 50 – Time\_Window element content**

XML Tag name	Type	Attributes	C Format	Description
Column_1	real	-	%lf	Element in the first column
Column_2	real	-	%lf	Element in the second column
Column_3	real	-	%lf	Element in the third column

**Table 51 – Row element content**

Example:

```
<Data_Block type="xml">
  <Swath>
    <Output_File_Description>OLCI</Output_File_Description>
    <Output_File_Type>MPL_SWTREF</Output_File_Type>
    <Swath_Type>open</Swath_Type>
    <Num_Swath_Records>1200</Num_Swath_Records>
    <Refraction>
      <Model>NO_REF</Model>
      <Freq unit="MHz">0.0</Freq>
    </Refraction>
    <List_of_Swath_Points count="3">
      <Swath_Point>
        <Pointing_Geometry>
          <Azimuth unit="deg">+270.000000</Azimuth>
          <Elevation unit="deg">+068.295000</Elevation>
          <Altitude unit="m">+000000.000</Altitude>
        </Pointing_Geometry>
      </Swath_Point>
      <Swath_Point>
        <Pointing_Geometry>
          <Azimuth unit="deg">+090.000000</Azimuth>
```

```

        <Elevation unit="deg">+090.000000</Elevation>
        <Altitude unit="m">+000000.000</Altitude>
    </Pointing_Geometry>
</Swath_Point>
<Swath_Point>
    <Pointing_Geometry>
        <Azimuth unit="deg">+090.000000</Azimuth>
        <Elevation unit="deg">+043.135000</Elevation>
        <Altitude unit="m">+000000.000</Altitude>
    </Pointing_Geometry>
</Swath_Point>
</List_of_Swath_Points>
<Sat_Nominal_Att>
    <AOCS_Model>YAW_STEERING_MODE</AOCS_Model>
</Sat_Nominal_Att>
<Sat_Att>
    <None></None>
</Sat_Att>
<Instr_Att>
    <None></None>
</Instr_Att>
</Swath>
</Data_Block>

```

### 3.6.3 Schema Reference

An example of validating XML schema for this file type is located at:  
[http://eop-cfi.esa.int/CFI/EE\\_CFI\\_SCHEMAS/EO\\_OPER\\_MPL\\_SW\\_DEF\\_0400.XSD](http://eop-cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_MPL_SW_DEF_0400.XSD)

This schema is compliant to [RD02] and includes format and range checks to ensure compliance to this specification and to the File Format Standard [RD01]. The schema file is named according to section 6.1.1 in [RD02] and is applicable to files named `MMM_OPER_MPL_SW_DEF_<instance_id>.EOF`.

The following is the content of the [Earth\\_Observation\\_File](#) required to reference the above schema.

```

<Earth_Observation_File xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
    xsi:schemaLocation="http://eop-cfi.esa.int/CFI http://eop-
cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_MPL_SW_DEF_0401.XSD"
    xmlns="http://eop-cfi.esa.int/CFI" schemaVersion="4.1">

```



## 3.7 Swath Template File

### 3.7.1 Variable Header

The Variable Header content is a sequence of XML elements described in [Table 52](#)~~Table 52~~.

XML Tag name	Type	Attributes	C Format	Description
Reference_OSF	string	-	%s	Orbit Scenario File used for generating the file
Reference_SDF	string	-	%s	Swath definition file used for generating the file
Absolute_Orbit	integer	-	%ld	Orbit for which the STF has been generated
Start_Validity_Orbit	integer	-	%ld	First orbit for which the STF is valid
Stop_Validity_Orbit	integer	-	%ld	Last orbit for which the STF is valid
Swath_Type	string. one of the following values: • open • closed	-	%s	Swath type
Swath_Point_Type	string. one of the following values: • geodetic • inertial	-	%s	Describes the type of swath points: inertial (RA and Declination) or geodetic (longitude and latitude)
One of the following: Orbit_Geometry Orbit_State_Vector	XML element	-	-	Orbit_Geometry: see <a href="#">Table 54</a> <del>Table 54</del> . Orbit_State_Vector: see <a href="#">Table 55</a> <del>Table 55</del> .
Time_Step	real	unit="s"	%f	Seconds between two swath points
List_of_STF_Altitudes	XML element	count="n" where n is the number of elements in the list	-	List of STF_Altitude elements, see <a href="#">Table 53</a> <del>Table 53</del>
Refraction	XML element	-	-	Refraction model structure, see <a href="#">Table 28</a> <del>Table 28</del>

**Table 52 – Variable Header content**

XML Tag name	Type	Attributes	C Format	Description
STF_Altitude	real	unit="m"	%f	Altitude for a swath point in m

**Table 53 – STF\_Altitude element content**

XML Tag name	Type	Attributes	C Format	Description
Repeat_Cycle	real	unit="day"	%f	Repeat cycle in days
Cycle_Length	real	unit="orbit"	%f	Cycle length in orbits
MLST_Drift	real	unit="s/day"	%f	Mean local solar time drift

**Table 54 – Orbit\_Geometry element content**



XML Tag name	Type	Attributes	C Format	Description
Absolute_Orbit	integer	-	%d	Orbit number for the swath template file.
Pos_X	real	unit="m"	%f	Position in X coordinate (meters)
Pos_Y	real	unit="m"	%f	Position in Y coordinate (meters)
Pos_Z	real	unit="m"	%f	Position in Z coordinate (meters)
Vel_X	real	unit="m/s"	%f	Velocity in X coordinate (m/s)
Vel_Y	real	unit="m/s"	%f	Velocity in Y coordinate (m/s)
Vel_Z	real	unit="m/s"	%f	Velocity in Z coordinate (m/s)

**Table 55 – Orbit\_State\_Vector element content**

Example:

```

<Variable_Header>

<Reference_OSF>MMM_OPER_MPL_ORBSCT_20200401T040000_20200401T080010_0001.EOF</
Reference_OSF>

<Reference_SDF>MMM_OPER_MPL_SW_DEF_20200101T000000_20300101T000000_0001.EOF</
Reference_SDF>
  <Absolute_Orbit>2000</Absolute_Orbit>
  <Start_Validity_Orbit>1990</Start_Validity_Orbit>
  <Stop_Validity_Orbit>2010</Stop_Validity_Orbit>
  <Swath_Type>open</Swath_Type>
  <Swath_Point_Type>geodetic</Swath_Point_Type>
  <Orbit_Geometry>
    <Repeat_Cycle unit="day">35</Repeat_Cycle>
    <Cycle_Length unit="orbit">501</Cycle_Length>
    <MLST_Drift unit="s/day">+000.000000</MLST_Drift>
  </Orbit_Geometry>
  <Time_Step unit="s">5.029940120</Time_Step>
  <List_of_STF_Altiludes count="4">
    <STF_Altilude unit="m">+000000.000</STF_Altilude>
    <STF_Altilude unit="m">+000000.000</STF_Altilude>
    <STF_Altilude unit="m">+000000.000</STF_Altilude>
    <STF_Altilude unit="m">+000000.000</STF_Altilude>
  </List_of_STF_Altiludes>
  <Refraction>
    <Model>NO_REF</Model>
    <Freq unit="MHz">0.0</Freq>
  </Refraction>
</Variable_Header>
    
```

### 3.7.2 Data Block

The Data Block content is a sequence of XML elements described in [Table 56](#).

XML Tag name	Type	Attributes	C Format	Description
List_of_STF_Pts	XML element	count="n" where n is the number of elements in the list	-	List of STF_Pt elements, see <a href="#">Table 57</a> .

**Table 56 – Data Block content**



XML Tag name	Type	Attributes	C Format	Description
One of the following List_of_Geodetic_Pts List_of_Inertial_Pts	XML element	count="n" where n is the number of elements in the list	-	List_of_Geodetic_Pts: List of Geodetic_Pt elements, see <a href="#">Table 58</a>  List_of_Inertial_Pts: List of Inertial_Pt elements, see <a href="#">Table 59</a>

**Table 57 – STF\_Pt element content**

XML Tag name	Type	Attributes	C Format	Description
Long	real	unit="deg"	%f	Longitude of the point in deg
Lat	real	unit="deg"	%f	Latitude of the point in deg

**Table 58 – Geodetic\_Pt element content**

XML Tag name	Type	Attributes	C Format	Description
Ra	real	unit="deg"	%f	Right Ascension in deg
Dec	real	unit="deg"	%f	Declination in deg

**Table 59 – Inertial\_Pt element content**

Example (only few points are shown):

```
<Data_Block type="xml">
  <List_of_STF_Pts count="1200">
    <STF_Pt>
      <List_of_Geodetic_Pts count="4">
        <Geodetic_Pt>
          <Long unit="deg">-000.000000</Long>
          <Lat unit="deg">-000.000000</Lat>
        </Geodetic_Pt>
        <Geodetic_Pt>
          <Long unit="deg">-000.000000</Long>
          <Lat unit="deg">-010.000000</Lat>
        </Geodetic_Pt>
        <Geodetic_Pt>
          <Long unit="deg">-010.000000</Long>
          <Lat unit="deg">-010.000000</Lat>
        </Geodetic_Pt>
        <Geodetic_Pt>
          <Long unit="deg">-010.000000</Long>
          <Lat unit="deg">-000.000000</Lat>
        </Geodetic_Pt>
      </List_of_Geodetic_Pts count="4">
    </STF_Pt>
```

[...]

```
<STF_Pt>
  <List_of_Geodetic_Pts count="4">
    <Geodetic_Pt>
      <Long unit="deg">010.000000</Long>
      <Lat unit="deg">350.000000</Lat>
    </Geodetic_Pt>
    <Geodetic_Pt>
      <Long unit="deg">010.000000</Long>
      <Lat unit="deg">000.000000</Lat>
    </Geodetic_Pt>
  </List_of_Geodetic_Pts count="4">
</STF_Pt>
```

```

        <Long unit="deg">020.000000</Long>
        <Lat unit="deg">-010.000000</Lat>
    </Geodetic_Pt>
    <Geodetic_Pt>
        <Long unit="deg">020.000000</Long>
        <Lat unit="deg">350.000000</Lat>
    </Geodetic_Pt>
</List_of_Geodetic_Pts>
</STF_Pt>
</List_of_STF_Pts>
</Data_Block>

```

### 3.7.3 Schema Reference

An example of validating XML schema for this file type is located at:  
[http://eop-cfi.esa.int/CFI/EE\\_CFI\\_SCHEMAS/EO\\_OPER\\_MPL\\_SWTREF\\_0400.XSD](http://eop-cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_MPL_SWTREF_0400.XSD)

This schema is compliant to [RD02] and includes format and range checks to ensure compliance to this specification and to the File Format Standard [RD01]. The schema file is named according to section 6.1.1 in [RD02] and is applicable to files named `MMM_OPER_MPL_SWTREF_<instance_id>.EOF`.

The following is the content of the [Earth\\_Observation\\_File](#) required to reference the above schema.

```

<Earth_Observation_File xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
  xsi:schemaLocation="http://eop-cfi.esa.int/CFI http://eop-
cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_MPL_SWTREF_0400.XSD"
  xmlns="http://eop-cfi.esa.int/CFI" schemaVersion="4.0">

```

## 3.8 Zone Database File

### 3.8.1 Variable Header

The Variable Header is empty for this type of file.

### 3.8.2 Data Block

The Data Block content is a sequence of XML elements described in [Table 60](#)~~Table 60~~.

XML Tag name	Type	Attributes	C Format	Description
List_of_Zones	XML element	count="n" where n is the number of elements in the list	-	List of Zone elements. See <a href="#">Table 61</a> <del>Table 61</del>

**Table 60 – Data Block content**

XML Tag name	Type	Attributes	C Format	Description
Zone_Id	string	-	%s	Zone name
Zone_Description	string	-	%s	Zone description
Surface	string	-	%s	Type of surface
Projection	string	-	%s	Projection
Creator	string	-	%s	Creator name
List_of_Polygon_Pts	XML element	count="n" where n is the number of elements in the list	-	List of Polygon_Pt elements, points defining the zone. See <a href="#">Table 62</a> <del>Table 62</del> .
Diameter	real	unit="m"	%f	Diameter of the zone if the list of polygon points is empty.

**Table 61 – Zone element content**

XML Tag name	Type	Attributes	C Format	Description
Long	real	unit="deg"	%f	longitude of the point in deg ( <del>-360</del> , 360)
Lat	real	unit="deg"	%f	latitude of the point in deg (-90, 90)

**Table 62 – Polygon\_Pt element content**

**Example:**

```

<Data_Block type="xml">
  <List_of_Zones count="1">
    <Zone>
      <Zone_Id>RECT_ZONE</Zone_Id>
      <Zone_Description></Zone_Description>
      <Surface></Surface>
      <Projection>RECTANGULAR</Projection>
      <Creator>TEST DATA</Creator>
      <List_of_Polygon_Pts count="4">
        <Polygon_Pt>
          <Long unit="deg">-030.000000</Long>
          <Lat unit="deg">-020.000000</Lat>
        </Polygon_Pt>
        <Polygon_Pt>
          <Long unit="deg">-030.000000</Long>
          <Lat unit="deg">-010.000000</Lat>
        </Polygon_Pt>
        <Polygon_Pt>
          <Long unit="deg">-011.000000</Long>
          <Lat unit="deg">-010.000000</Lat>
        </Polygon_Pt>
        <Polygon_Pt>
          <Long unit="deg">-011.000000</Long>
          <Lat unit="deg">-020.000000</Lat>
        </Polygon_Pt>
      </List_of_Polygon_Pts>
      <Diameter unit="m">+000.000000</Diameter>
    </Zone>
  </List_of_Zones>
</Data_Block>

```

**3.8.3 Schema Reference**

An example of validating XML schema for this file type is located at:  
[http://eop-cfi.esa.int/CFI/EE\\_CFI\\_SCHEMAS/EO\\_OPER\\_MPL\\_ZON\\_DB\\_0300.XSD](http://eop-cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_MPL_ZON_DB_0300.XSD)

This schema is compliant to [RD02] and includes format and range checks to ensure compliance to this specification and to the File Format Standard [RD01]. The schema file is named according to section 6.1.1 in [RD02] and is applicable to files named `MMM_OPER_MPL_ZON_DB_<instance_id>.EOF`.

The following is the content of the [Earth\\_Observation\\_File](#) required to reference the above schema.

```

<Earth_Observation_File
  xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
  xsi:schemaLocation="http://eop-cfi.esa.int/CFI http://eop-
cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_MPL_ZON_DB_0300.XSD"
  xmlns="http://eop-cfi.esa.int/CFI" schemaVersion="3.0">

```

## 3.9 Station Database File

### 3.9.1 Variable Header

The Variable Header is empty for this type of file.

### 3.9.2 Data Block

The Data Block content is a sequence of XML elements described in [Table 63](#)~~Table 63~~.

XML Tag name	Type	Attributes	C Format	Description
List_of_Ground_Station	XML element	count="n" where n is the number of elements in the list	-	List of Ground_Station elements. See <a href="#">Table 61</a> <del>Table 61</del> .

**Table 63 – Data Block content**

XML Tag name	Type	Attributes	C Format	Description
Station_Id	string	-	%s	Station name
Descriptor	string	-	%s	Station description
Antenna	string	-	%s	Antenna band
Frequency (optional)	real	unit="Hz"	%f	Frequency in Hz
Purpose	string	-	%s	Purpose
Type	string	-	%s	Station Type
Location	XML element	-	-	Station location. See Location element, <a href="#">Table 65</a> <del>Table 65</del> .
List_of_Spacecrafts	XML element	count="n" where n is the number of elements in the list	-	Spacecraft dependant mask type parameters. List of Spacecraft elements, see <a href="#">Table 66</a> <del>Table 66</del> .
Default_El	real	unit="deg"	%f	Default elevation in deg.
List_of_Mask_Points	XML element	count="n" where n is the number of elements in the list	-	List of Mask_Point elements, see <a href="#">Table 67</a> <del>Table 67</del> .

**Table 64 – Ground\_Station element content**

XML Tag name	Type	Attributes	C Format	Description
Long	real	unit="deg"	%f	Longitude in deg
Lat	real	unit="deg"	%f	Latitude in deg
Alt	real	unit="deg"	%f	Altitude in deg

**Table 65 – Location element content**

XML Tag name	Type	Attributes	C Format	Description
Name	string	-	%s	Spacecraft name
Aos_El	real	unit="deg"	%f	Acquisition of signal elevation
Los_El	real	unit="deg"	%f	Loss of signal elevation
Mask	string	-	%s	Mask type. Possible values: AOS_LOS_WITH_MASK AOS_LOS MASK_ONLY

**Table 66 – Spacecraft element content**

XML Tag name	Type	Attributes	C Format	Description
Az	real	unit="deg"	%f	Azimuth
El	real	unit="deg"	%f	Elevation

Table 67 – Mask\_Point element content

Example (only few Mask Points are shown):

```

<Data_Block type="xml">
  <List_of_Ground_Stations count="1">
    <Ground_Station>
      <Station_id>GSVLBRHX</Station_id>
      <Descriptor>Svalbard (PLATABERGET)</Descriptor>
      <Antenna>X-BAND </Antenna>
      <Purpose>GLOBAL + REGIONAL </Purpose>
      <Type> </Type>
      <Location>
        <Long unit="deg">+015.400000</Long>
        <Lat unit="deg">+078.130000</Lat>
        <Alt unit="m">+0470.000</Alt>
      </Location>
      <List_of_Spacecrafts count="1">
        <Spacecraft>
          <Name>SMOS</Name>
          <Aos_El unit="deg">+005.000000</Aos_El>
          <Los_El unit="deg">+005.000000</Los_El>
          <Mask>AOS_LOS_WITH_MASK</Mask>
        </Spacecraft>
      </List_of_Spacecrafts>
      <Default_El unit="deg">+0000.000</Default_El>
      <List_of_Mask_Points count="22">
        <Mask_Point>
          <Az unit="deg">+000.000000</Az>
          <El unit="deg">+000.400000</El>
        </Mask_Point>
        <Mask_Point>
          <Az unit="deg">+032.000000</Az>
          <El unit="deg">+000.400000</El>
        </Mask_Point>
        [...]
        <Mask_Point>
          <Az unit="deg">+272.000000</Az>
          <El unit="deg">+000.400000</El>
        </Mask_Point>
        <Mask_Point>
          <Az unit="deg">+360.000000</Az>
          <El unit="deg">+000.400000</El>
        </Mask_Point>
      </List_of_Mask_Points>
    </Ground_Station> >
  </List_of_Ground_Stations>
</Data_Block>

```



### 3.9.3 Schema Reference

An example of validating XML schema for this file type is located at:  
[http://eop-cfi.esa.int/CFI/EE\\_CFI\\_SCHEMAS/EO\\_OPER\\_MPL\\_GND\\_DB\\_0300.XSD](http://eop-cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_MPL_GND_DB_0300.XSD)

This schema is compliant to [RD02] and includes format and range checks to ensure compliance to this specification and to the File Format Standard [RD01]. The schema file is named according to section 6.1.1 in [RD02] and is applicable to files named `MMM_OPER_MPL_GND_DB_<instance_id>.EOF`.

The following is the content of the [Earth\\_Observation\\_File](#) required to reference the above schema.

```
<Earth_Observation_File
  xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
  xsi:schemaLocation="http://eop-cfi.esa.int/CFI http://eop-
cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_MPL_GND_DB_0300.XSD"
  xmlns="http://eop-cfi.esa.int/CFI" schemaVersion="3.0">
```

## 3.10 Attitude Definition File

### 3.10.1 Variable Header

The Variable Header is empty for this type of file.

### 3.10.2 Data Block

The Data Block content is a sequence of XML elements described in [Table 68](#)~~Table 68~~.

XML Tag name	Type	Attributes	C Format	Description
Attitude_Definition	XML element	-	-	Attitude_Definition data structure see

**Table 68 – Data Block content**

XML Tag name	Type	Attributes	C Format	Description
Sat_Nominal_Att	XML element	-	-	Satellite Nominal Attitude initialization data, see <a href="#">Table 70</a> <del>Table 70</del>
Sat_Att	XML element	-	-	Satellite Attitude initialization data, see <a href="#">Table 71</a> <del>Table 71</del> .
Instr_Att	XML element	-	-	Instrument Attitude initialization data, see <a href="#">Table 71</a> <del>Table 71</del> .

**Table 69 – Swath element content**

XML Tag name	Type	Attributes	C Format	Description
One of the following:  None AOCS_Model Parameter_Model Harmonic_Model File_Model	AOCS_Model integer  Parameter_Model Harmonic_Model File_Model XML element  None XML element (empty)	-	AOCS_Model %ld	Satellite Nominal Attitude initialization data  AOCS_Model AOCS model. It can contain the name of the AOCS model or the corresponding number, both are allowed. The allowed values are the following (the equivalent number is shown between parenthesis): GEOCENTRIC_POINTING (0) LOCAL_NORMAL_POINTING (1) YAW_STEERING_MODE (2) ZERO_DOPPLER_YSM (3)  Parameter_Model: see <a href="#">Table 40</a> <del>Table 40</del> Harmonic_Model: see <a href="#">Table 41</a> <del>Table 41</del> File_Model: see <a href="#">Table 42</a> <del>Table 42</del>

**Table 70 – Sat\_Nominal\_Att element content**

XML Tag name	Type	Attributes	C Format	Description
One of the following None Angle_Model Matrix_Model Harmonic_Model File_Model	XML element	-	-	Satellite Attitude initialization data
Only in Sat_Att Quaternion_Plus_Angle Quaternion_Plus_Matrix	None XML element (empty)			Angle_Model: see <a href="#">Table 43</a> Matrix_Model: see <a href="#">Table 44</a> Harmonic_Model: see <a href="#">Table 41</a> File_Model: see <a href="#">Table 42</a>  Quaternion_Plus_Angle Quaternion_Plus_Matrix

Table 71 – Sat\_ and Instrument\_Att element content

XML Tag name	Type	Attributes	C Format	Description
Model	integer	-	%ld	Attitude Model Identifier It can contain the name of the model or the corresponding number, both are allowed. The allowed values are the following (the equivalent number is shown between parenthesis): GENERIC (0) ENVISAT (1) CRYOSAT (2) ADM (3) SENTINEL1 (4) SENTINEL2 (5) GEO (6) METOPSG (7)
List_of_Parameters	XML element	count="n" where n is the number of elements in the list	-	List of Parameter elements. See <a href="#">Table 45</a> .

Table 72 – Parameter\_Model element content

XML Tag name	Type	Attributes	C Format	Description
Angle_Type	integer	-	%ld	It can contain the name of the angle type or the corresponding number, both are allowed. The allowed values are the following (the equivalent number is shown between parenthesis): TRUE_LAT_TOD (0) TRUE_LAT_EF (1)
List_of_Harmonic_Pitch	XML element	count="n" where n is the number of elements in the list	-	List of Harmonic elements for Pitch see <a href="#">Table 46</a> .
List_of_Harmonic_Roll	XML element	count="n" where n is the number of elements in the list	-	List of Harmonic elements for Roll see <a href="#">Table 46</a> .
List_of_Harmonic_Yaw	XML element	count="n" where n is the number of elements in the list	-	List of Harmonic elements for Yaw see <a href="#">Table 46</a> .
Offsets (present only in Instr_Att)	XML element	-	-	See <a href="#">Table 47</a> .

Table 73 – Harmonic\_Model element content

XML Tag name	Type	Attributes	C Format	Description
Angle_Model	Structure (see Table 249)	-	-	Angles see <a href="#">Table 43</a> <del>Table 43</del>
Quaternion_File	string	-	%s	Name of the file containing the list of quaternions.

**Table 74 – Quaternion\_Plus\_Angle element content**

XML Tag name	Type	Attributes	C Format	Description
Matrix_Model	Structure (see Table 250)	-	-	Matrix see <a href="#">Table 44</a> <del>Table 44</del>
Quaternion_File	string	-	%s	Name of file containing the list of quaternions.

**Table 75 – Quaternion\_Plus\_Matrix element content**

Example 1:

```

<Data_Block type="xml">
  <Attitude_Definition>

    <Sat_Nominal_Att>
      <AOCS_Model>YAW_STEERING_MODE</AOCS_Model>
    </Sat_Nominal_Att>

    <Sat_Att>
      <File_Model>
        <List_of_Files count="1">

          <File>MA1_TEST_AUX_ATTRES_20210408T050853_20210408T101753_0001.EOF</File>
        </List_of_Files>
        <Auxiliary_File/>
        <Time_Selection>
          <Select_File/>
        </Time_Selection>
      </File_Model>
    </Sat_Att>

    <Instr_Att>
      <Angle_Model>
        <Angle_1 unit="deg">0.0</Angle_1>
        <Angle_2 unit="deg">0.0</Angle_2>
        <Angle_3 unit="deg">0.0</Angle_3>
        <Offset_X unit="m">0.0</Offset_X>
        <Offset_Y unit="m">0.0</Offset_Y>
        <Offset_Z unit="m">0.0</Offset_Z>
      </Angle_Model>
    </Instr_Att>

  </Attitude_Definition>
</Data_Block>

```

Example 2:

```

<Data_Block type="xml">
  <Attitude_Definition>

```

```

<Sat_Nominal_Att>
  <Parameter_Model>
    <Model>1</Model>
    <List_of_Parameters count="3">
      <Parameter>-000.167200</Parameter>
      <Parameter>+000.050100</Parameter>
      <Parameter>+003.928400</Parameter>
    </List_of_Parameters>
  </Parameter_Model>
</Sat_Nominal_Att>
<Sat_Att>
  <Angle_Model>
    <Angle_1 unit="deg">0.01</Angle_1>
    <Angle_2 unit="deg">0.00</Angle_2>
    <Angle_3 unit="deg">0.00</Angle_3>
  </Angle_Model>
</Sat_Att>
<Instr_Att>
  <Matrix_Model>
    <Row_1>
      <Column_1>1.00</Column_1>
      <Column_2>0.00</Column_2>
      <Column_3>0.00</Column_3>
    </Row_1>
    <Row_2>
      <Column_1>0.00</Column_1>
      <Column_2>1.00</Column_2>
      <Column_3>0.00</Column_3>
    </Row_2>
    <Row_3>
      <Column_1>0.00</Column_1>
      <Column_2>0.00</Column_2>
      <Column_3>1.00</Column_3>
    </Row_3>
  </Matrix_Model>
  <Offsets>
    <Offset_X unit="m">0.00</Offset_X>
    <Offset_Y unit="m">0.02</Offset_Y>
    <Offset_Z unit="m">0.00</Offset_Z>
  </Offsets>
</Instr_Att>
</Attitude_Definition>
</Data?Block>

```

### 3.10.3 Schema Reference

An example of validating XML schema for this file type is located at:  
[http://eop-cfi.esa.int/CFI/EE\\_CFI\\_SCHEMAS/EO\\_OPER\\_INT\\_ATTDEF\\_0302.XSD](http://eop-cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_INT_ATTDEF_0302.XSD)

This schema is compliant to [RD02] and includes format and range checks to ensure compliance to this specification and to the File Format Standard [RD01]. The schema file is named according to section 6.1.1 in [RD02] and is applicable to files named `MMM_OPER_INT_ATTDEF_<instance_id>.EOF`.

The following is the content of the [Earth\\_Observation\\_File](#) required to reference the above schema.

```
<Earth_Observation_File  
  xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"  
  xsi:schemaLocation="http://eop-cfi.esa.int/CFI http://eop-  
cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_INT_ATTDEF_0302.XSD"  
  xmlns="http://eop-cfi.esa.int/CFI" schemaVersion="3.2">
```

## 3.11 Field of View Configuration File

### 3.11.1 Variable Header

The Variable Header is empty for this type of file.

### 3.11.2 Data Block

The Data Block content is a sequence of XML elements described in [Table 76](#)~~Table 76~~.

XML Tag name	Type	Attributes	C Format	Description
FOV_Constraints	XML element	type="mode"  being mode one of the following values: Link_to_Spacecraft	-	It defines Field of View constraints, see <a href="#">Table 77</a> <del>Table 77</del> .

**Table 76 – Data Block content**

XML Tag name	Type	Attributes	C Format	Description
List_of_Masks	XML element	count="n"  being n the number of elements in the list	-	List of Mask elements, see <a href="#">Table 78</a> <del>Table 78</del>
Miscellaneous_Parameters	XML element	-	-	Additional parameters, see <a href="#">Table 81</a> <del>Table 81</del> .

**Table 77 – FOV\_Constraints element content**

XML Tag name	Type	Attributes	C Format	Description
Mask	XML element	type="mask_type"  being mask_type one of the following values: inclusive exclusive	-	It defines a mask in terms of mask points, see <a href="#">Table 79</a> <del>Table 79</del>

**Table 78 – Mask element**

XML Tag name	Type	Attributes	C Format	Description
Status	string	-	%s	Mask status. Allowed values: ENABLED DISABLED
List_of_Mask_Points	XML element	count="n"  being n the number of elements in the list	-	List of Mask_Point elements, see <a href="#">Table 80</a> <del>Table 80</del> .

**Table 79 – Mask element content**

XML Tag name	Type	Attributes	C Format	Description
--------------	------	------------	----------	-------------

Azimuth	real	unit="deg"	-	Azimuth of the point in deg
Elevation	real	unit="deg"	-	Elevation of the point in deg

Table 80 – Mask\_Point element content

XML Tag name	Type	Attributes	C Format	Description
Min_Tg_Height	real	unit="m"	-	Minimum tangent height allowed in m

Table 81 – Miscellaneous\_Parameters element content

Example (only few mask points are shown):

```

<Data_Block type="xml">
  <FOV_Constraints type="Link_to_Spacecraft">
    <List_of_Masks count="2">
      <Mask type="inclusive">
        <Status>ENABLED</Status>
        <List_of_Mask_Points count="4">
          <Mask_Point>
            <Azimuth unit="deg">0.0</Azimuth>
            <Elevation unit="deg">10.0</Elevation>
          </Mask_Point>
          [...]
          <Mask_Point>
            <Azimuth unit="deg">0.0</Azimuth>
            <Elevation unit="deg">-90.0</Elevation>
          </Mask_Point>
        </List_of_Mask_Points>
      </Mask>
      <Mask type="exclusive">
        <Status>ENABLED</Status>
        <List_of_Mask_Points count="8">
          <Mask_Point>
            <Azimuth unit="deg">0.0</Azimuth>
            <Elevation unit="deg">-85.0</Elevation>
          </Mask_Point>
          [...]
          <Mask_Point>
            <Azimuth unit="deg">0.0</Azimuth>
            <Elevation unit="deg">-90.0</Elevation>
          </Mask_Point>
        </List_of_Mask_Points>
      </Mask>
    </List_of_Masks>
    <Miscellaneous_Parameters>
      <Min_Tg_Height unit="m">19000.0</Min_Tg_Height>
    </Miscellaneous_Parameters>
  </FOV_Constraints>
</Data_Block>

```

### 3.11.3 Schema Reference

An example of validating XML schema for this file type is located at:  
[http://eop-cfi.esa.int/CFI/EE\\_CFI\\_SCHEMAS/EO\\_OPER\\_INT\\_FOVCFG\\_0300.XSD](http://eop-cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_INT_FOVCFG_0300.XSD)

This schema is compliant to [RD02] and includes format and range checks to ensure compliance to this specification and to the File Format Standard [RD01]. The schema file is named according to section 6.1.1 in [RD02] and is applicable to files named `MMM_OPER_INT_FOVCFG_<instance_id>.EOF`.

The following is the content of the [Earth\\_Observation\\_File](#) required to reference the above schema.

```
<Earth_Observation_File
```





```
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"  
xsi:schemaLocation="http://eop-cfi.esa.int/CFI http://eop-  
cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_INT_FOVCFG_0300.XSD"  
xmlns="http://eop-cfi.esa.int/CFI" schemaVersion="3.0">
```

### 3.12 DEM Generic Raster Configuration File

#### 3.12.1 File naming convention

The **DEM tiles** (i.e. binary height raster data) are named after the **southwestern corner** in degrees. The name will have the following format, without any extension,

XXAYYYB

where:

- XX: numeric latitude of southwestern corner (completed with 0 at the beginning if needed),
- A: N (for North) or S (for South),
- YYY: numeric longitude of southwestern corner (completed with 0 at the beginning if needed),
- B: W (for West) or E (for East).

The **DEM flag files** will have the same name as the corresponding DEM tile but adding the suffix “\_flag”.


For example, a tile with southwestern corner at latitude -45 degrees and longitude 30 degrees, the files must be named:

- DEM tile: 45S030E
- DEM flag file: 45S030E\_flag

#### 3.12.2 Binary Data Format

The data written in DEM tiles and DEM flag files is binary data with the following characteristics:

- the data is written so that the first row in the file corresponds to the southern-most latitude followed, in row major order, by adjacent northern rows – as shown in the figure [Figure 3](#), for a tile named by its southwesternmost corner 45S030E, the first row of the file contains data for latitude 45° South (i.e. bottom edge of the tile) while the last row of the file contain data for latitude 30° South (i.e. top edge of the tile);
- multibyte data layout is little-endian.

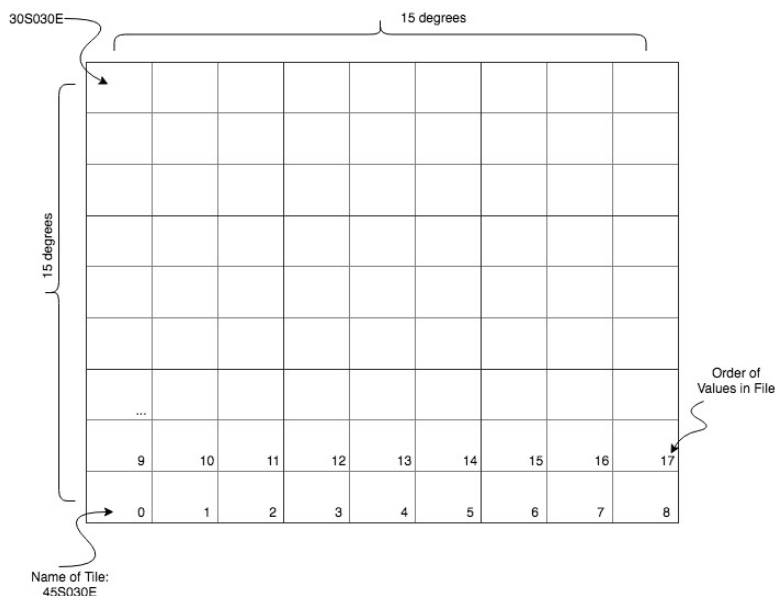

**Figure 3 – Order of data for Generic DEM Raster**

The description of the data types and sizes is provided in Section 3.12.5.

### 3.12.3 DEM Raster Configuration File

The DEM raster configuration file must be placed in the same directory as the DEM files.

It must have the name:

dem\_raster\_configuration.xml

This will be the name that the software will look for.

The DEM raster configuration file describes the content of the DEM files. In particular, the following items are listed:

- Data type of the DEM file data.
- Data unit of the stored altitudes.
- Number of rows and columns of the data.
- Angular resolution of the data.
- Reference with respect to which the altitudes are provided (geoid, ellipsoid).
- Value that must be considered as void (no data).
- Data type of the DEM flag file data.

### 3.12.4 Variable Header

The Variable Header is empty for this type of file.

### 3.12.5 Data Block

The Data Block content is a sequence of XML elements described in [Table 82](#).

XML Tag name	Type	Attributes	C Format	Description
DEM_Raster_Configuration	XML element	-	-	It defines DEM generic raster, see table <a href="#">Table 83</a>

**Table 82 – Data Block content**

XML Tag name	Type	Attributes	C Format	Description
Data_Type	XML element	-	%s	Data type of the DEM data. Allowed values: int16 int32 int64 float32 float64
Data_Unit	XML element	-	%s	Unit in which the DEM data is provided. Allowed values: Meter kilometer
Rows		-	%ld	Number of rows in the DEM tile
Columns		-	%ld	Number of columns in the DEM tile
Resolution		unit="data_resolution" being data_resolution one of the following values: deg min sec	%lf	Resolution of DEM data (angular separation between tile adjacent points).
Reference		-	%s	Reference with respect to which the DEM

				altitudes are provided. Allowed values: WGS84 EGM96
Void_Value		-	%If	Value to be considered as void value in DEM data.
Maximum_Height_Value (optional)		unit="meter"	%If	Value to be considered as maximum height (above the ellipsoid) found in the DEM. If not provided, the default value of 9000 meters is considered.
Flag_Type		-	%s	Data type of DEM flag file. Allowed values: int8 int16 int32 int64

**Table 83 – DEM\_Raster\_Configuration element content**

Example:

```
<Data_Block type="xml">
  <DEM_Raster_Configuration>
    <Data_Type>int16</Data_Type>
    <Data_Unit>meter</Data_Unit>
    <Rows>1800</Rows>
    <Columns>1800</Columns>
    <Resolution unit="sec">30</Resolution>
    <Reference>WGS84</Reference>
    <Void_Value>-32768</Void_Value>
    <Maximum_Height_Value unit="meter">10000.</Maximum_Height_Value>
    <Flag_Type>int8</Flag_Type>
  </DEM_Raster_Configuration >
</Data_Block>
```

### 3.12.6 Schema Reference

An example of validating XML schema for this file type is located at:

[http://eop-cfi.esa.int/CFI/EE\\_CFI\\_SCHEMAS/EO\\_OPER\\_MPL\\_DEMRAS\\_0301.XSD](http://eop-cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_MPL_DEMRAS_0301.XSD)

This schema is compliant to [RD02] and includes format and range checks to ensure compliance to this specification and to the File Format Standard [RD01]. The schema file is named according to section 6.1.1 in [RD02] and is applicable to files named `MMM_OPER_MPL_DEMRAS_<instance_id>.EOF`.

The following is the content of the [Earth\\_Observation\\_File](#) required to reference the above schema.

```
<Earth_Observation_File
  xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
  xsi:schemaLocation="http://eop-cfi.esa.int/CFI http://eop-
cfi.esa.int/CFI/EE_CFI_SCHEMAS/EO_OPER_MPL_DEMRAS_0301.XSD"
  xmlns="http://eop-cfi.esa.int/CFI" schemaVersion="3.1">
```